





## **Door Finger Protector**<sup>®</sup> **HCL** Hinge Cavity Fitting Instructions

Please contact the Safety Assured Advice Line on 01708 855777 if you need instructions or accessories for other door types e.g. PVCu, Crittall<sup>®</sup> steel, aluminium, glass, pivot, bi-fold etc. Please follow these instructions carefully. Failure to do so may adversely affect the performance of your Door Finger Protector®. Liability will not be accepted due to failure to fit the device strictly in accordance with the meaning of these instructions. YOUR STATUTORY RIGHTS ARE NOT AFFECTED. Ed.5 07.16

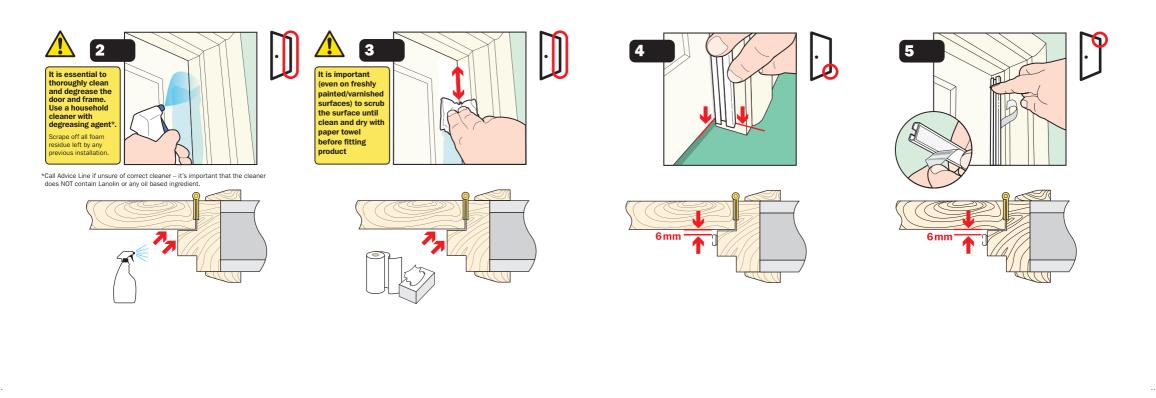

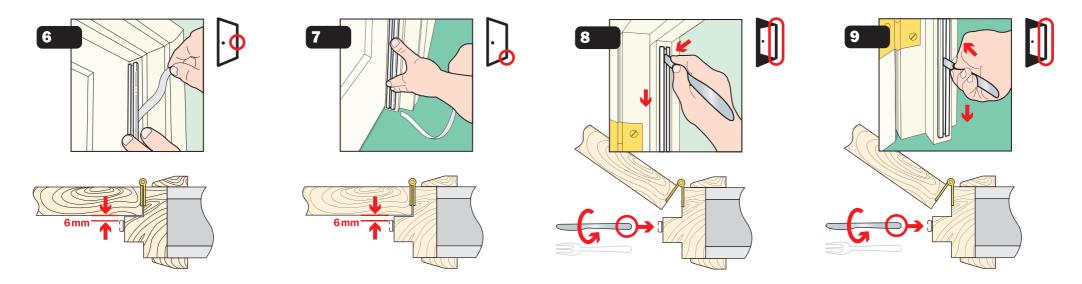


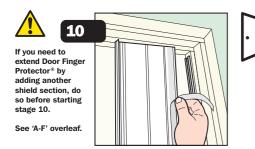













If in any doubt call us for


helpful advice






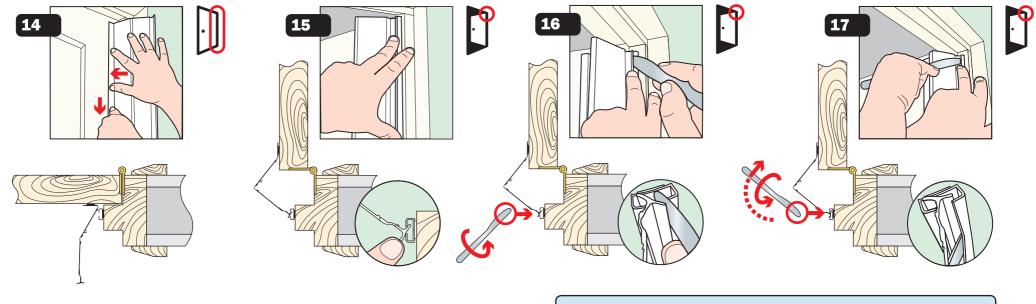


To temporarily unclip the shield for hinge access or door removal reverse stages 17 and 16 sliding knife downwards.

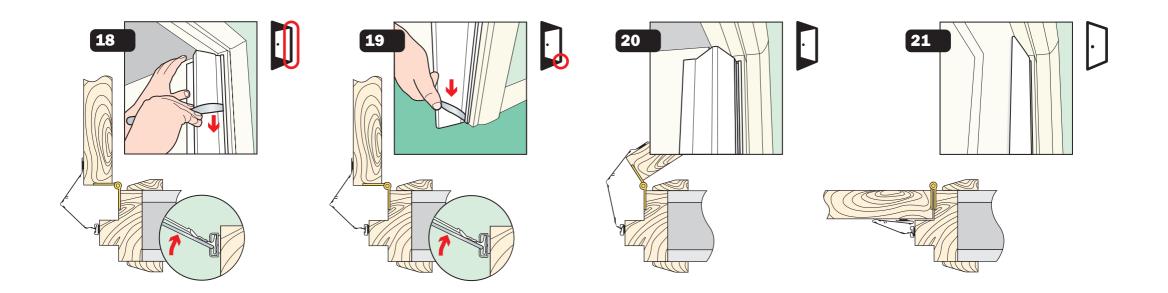



Extending Door Finger Protector<sup>®</sup> shield section for doors opening beyond the span of one hinge shield section

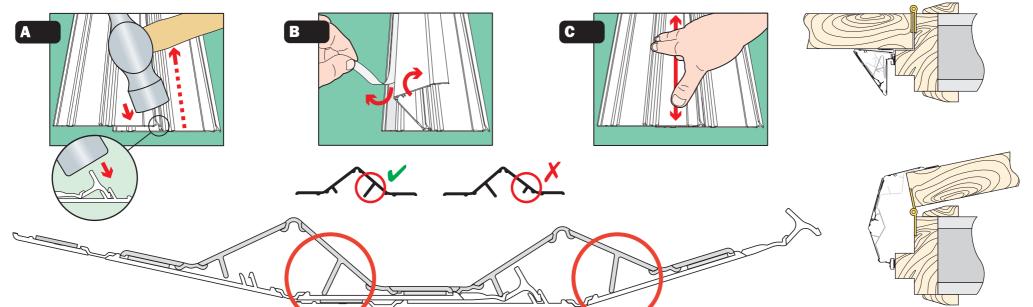



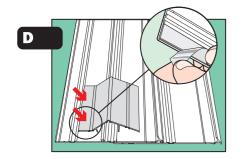

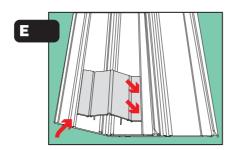

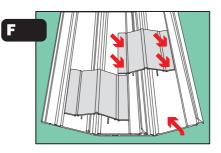




TECHNICAL: www.doorfingerprotector.co.uk

CERTIFIED INSTALLATION: www.safetyassured.com

## Safety Assured Limited

Home Farm Estate, Fen Lane, North Ockendon, Upminster, Essex RM14 3RD United Kingdom T: +44 (0)1708 855 777 F: +44 (0)1708 855 125 E: info@safetyassured.com



## Pivot Door Illustrations

3 Pivot





